

# VACUUM INDUCTION MELTING (VIM)

[edwardsvacuum.com](http://edwardsvacuum.com)

## WHERE IS VACUUM USED?

The vacuum induction melting (VIM) process involves the melting of metals by electromagnetic induction under vacuum.

The process involves the refining of metals and alloys under vacuum for the removal of dissolved and chemical-bonded impurities, resulting in an end product that is clean and homogeneous.

Depending on the metallurgical process and the final product, the vacuum levels during the refining phase fall in a  $10^{-1}$ – $10^{-4}$  mbar range.

### Key challenges

- Handling of high-volume chambers with extremely dusty environments
- Fast roughing pump-down time and resistance to dust involving coarse and fine particles
- Pumping high argon concentrations >70% at typically 50–450 mbar

## TYPICAL VACUUM INDUCTION MELTING SYSTEM

A good VIM vacuum system separates the roughing and backing lines, resulting in the following features:

- Dust in the roughing line remains free from oil contamination
- Containment of oil vapour in the backing line
- Elimination of the use of any holding pump
- Use of a smaller diffusion backing pump

Major advantages include


- Consistent vacuum performance to suit the individual process requirements
- Low operating costs
- Minimal planned maintenance

## SOLUTIONS

### Dry pumping systems – Recommended technology

GXS dry screw pumps and booster combinations

MAXX vacuum systems (GXS pump range systemised with pXH mechanical boosters)

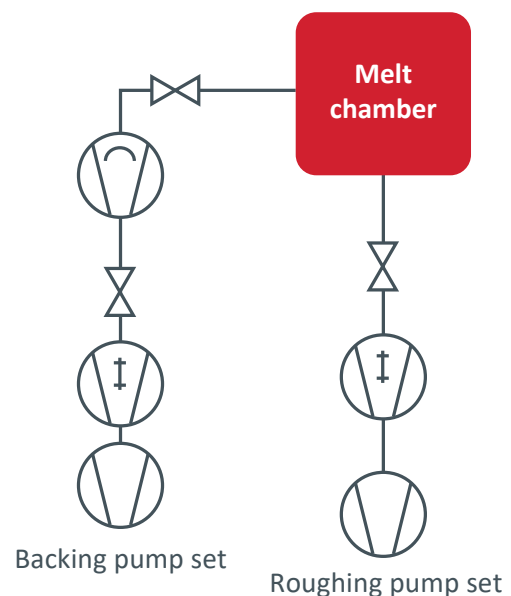

Typical layout for vacuum induction melting

### Oil-sealed pumping systems – Conventional technology

Stokes Microvac rotary piston pumps with the EH and 6" Stokes booster combination

Vapour booster

## EDWARDS' BENEFITS

## GXS DRY SCREW PUMPS

The GXS range featuring intelligent on-board control has been developed using the patented variable pitch tapered screw technology for exceptional performance and reliability. It is available in pumping speeds from 160 m<sup>3</sup>h<sup>-1</sup> to 750 m<sup>3</sup>h<sup>-1</sup> and, when combined with GMB vacuum boosters can achieve speeds of up to 3,450 m<sup>3</sup>h<sup>-1</sup>.

**Benefits:**

- Increased tolerance to particles created by the melt
- Clean residual vacuum
- Elimination of oil back streaming, which is a source of contamination and degassing in the furnace
- Large water vapour pumping capacity aids the drying of the new chamber lining
- Elimination of oil mist at the exhaust and external oil leaks

**Highly reliable**

Ability to handle harsh processes

**Low maintenance cost**

No unplanned downtime

**Increased productivity**

Longer intervals between services

**Safe operation, consistent output**

Automated control of your process



## MAXX VACUUM SYSTEMS

The GXS range featuring intelligent on-board control has been developed using the patented variable pitch tapered screw technology for exceptional performance and reliability. It is available in pumping speeds from 160 m<sup>3</sup>h<sup>-1</sup> to 750 m<sup>3</sup>h<sup>-1</sup> and, when combined with GMB vacuum boosters, can achieve speeds of up to 3,450 m<sup>3</sup>h<sup>-1</sup>.

**Variety of pump combinations ensure optimised configurations**

Delivers the performance required by your processes

**Easy to upgrade**

Allows a smooth upgrade whenever you need more capacity



## STOKES MICROVAC ROTARY PISTON PUMPS

Stokes Microvac rotary piston pumps have a large installed base in the metallurgy market. They can be packaged with the Edwards EH or Stokes 6" series mechanical boosters to provide pumping packages with capacities up to 6,630 m<sup>3</sup>h<sup>-1</sup>.

**Value for investment**

Low rotational speed enables a longer pump life cycle

**Easy on-site maintenance**

Robust, simple mechanism for high reliability and ease of rebuild

**Proven and tested**

Less sensitive to dust and vapour handling. Proven performance of over 80 years



## VAPOUR BOOSTERS

Our unique high-throughput vapour booster pumps deliver the maximum pumping speed for VIM process pressures. Available in sizes of 4,000 ls<sup>-1</sup> and 12,500 ls<sup>-1</sup>.

**High reliability**

High tolerance to system and process contamination

**Flexibility and ease of use**

Adaptable to various inlet and exhaust pressures

**Proven and tested**

Time-tested, proven performance of over 40 years

