


E2S TWO-STAGE ROTARY VANE PUMPS

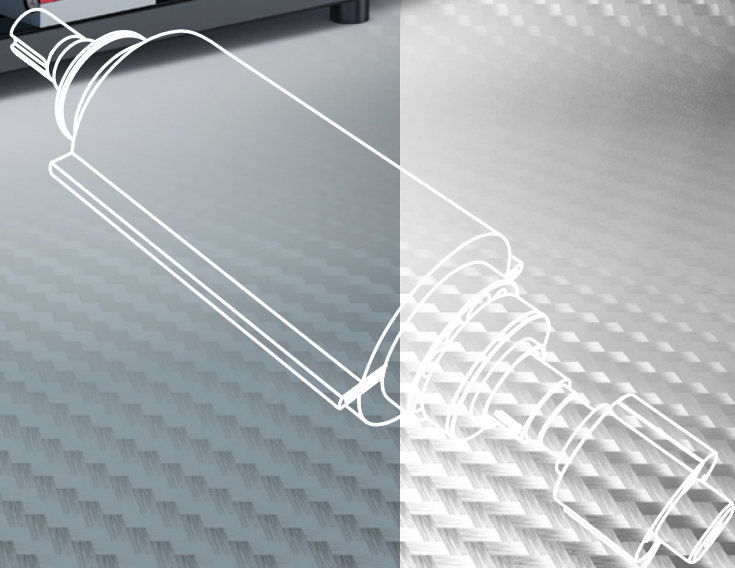

EDWARDS THE PARTNER OF CHOICE


Edwards is a world leader in the design, technology and manufacture of vacuum pumps for industrial applications with over 100 years' history.

We believe in delivering results that bring value to our customers by using our breadth of industry experience to identify and apply solutions. Using the most innovative and up-to-date modelling techniques, we can optimise the pumping configuration for customers to provide a system design giving the maximum performance in the most reliable and cost-effective way.

SIMPLE, YET POWERFUL ROTARY VANE PUMP

E2S range - E2S45, E2S65 and E2S85 - is our modern series of industrial two-stage oil-sealed rotary vane vacuum pumps for medium vacuum. E2S perfectly balances performance, cost and usability. A reliable piece of engineering, simply made and well-suited for many standard applications. It pumps down fast, handles vapours and contributes to minimising noise level in your workplace.

BOOST YOUR PRODUCTION NOT YOUR EXPENSES

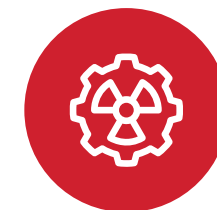

SPECIALISED PERFORMANCE

- High pumping speed to reduce cycle times and gain productivity
- Hydro mode with improved vapour handling capability to fit with humid applications
- Low noise level matching with lab environment expectations



MODERN DESIGN MADE SIMPLE

- Economical product with clean layout
- Built-in oil filter to protect pump mechanism from contaminants and prevent oil leaks
- Innovative design to increase cooling performance keeping high vapour tolerance
- No complex mechanical arrangement to keep technology simple



GREAT USABILITY

- Effective product design to accommodate users' needs
- Easy and pleasant to use and service. On-site cleaning to maximise uptime
- Efficient over-temperature protection and low oil level detection (optional features)
- Increased safety against operator misuse

E2S VARIANTS

- E2S45
- E2S65
- E2S85



WOULD YOU NEED MORE SPEED?

Standard combinations of E2S two-stage rotary pumps and EH mechanical boosters are available for high capacity demands.

Maximum pumping speed of standard E2S/EH systems at 50Hz

	EH250	EH500	EH1200
E2S45	230	X	X
E2S65	240	365	X
E2S85	250	385	770

Ultimate vacuum: 3x10⁻⁴ mbar

Factory pre-assembled, these pumping systems are compact, mobile and easy to use. With a direct start from atmospheric pressure our E2S85-EH1200 stack provides up to 900 m³/h effective speed and allows to reach high vacuum range with an ultimate vacuum of 3x10⁻⁴ mbar.



APPLICATIONS





- Vacuum degassing and drying
- Heat treatments and vacuum ovens
- Vacuum insulation
- Plasma treatments (except O2 plasma)
- Leak testing
- Gas production and handling
- Research and development
- Backing of high vacuum pumps or systems



TECHNICAL DATA


		E2S45	E2S65	E2S85
Max. displacement (50Hz)	m³h⁻¹	47	64	87
	cfm	28	38	51
Max. displacement (60Hz)	m³h⁻¹	56	77	105
	cfm	33	45	62
Pumping speed (50Hz)	m³h⁻¹	42	57	78
	cfm	25	34	46
Pumping speed (60Hz)	m³h⁻¹	50	69	94
	cfm	29	41	55
Ultimate total pressure without gas ballast	mbar	3.0E-03	3.0E-03	3.0E-03
	torr	2.25E-03	2.25E-03	2.25E-03
Ultimate vacuum with gas ballast (position 1)	mbar	6.0E-03	6.0E-03	6.0E-03
	torr	4.5E-03	4.5E-03	4.5E-03
Inlet connection	ISO-F / NW	40	40	40
Outlet connection	mm	25	25	25
Max. permitted outlet pressure	bar (g)	0.5	0.5	0.5
	psi (g)	7.3	7.3	7.3
Max. water vapour tolerance	mbar	20	15	13
	torr	15	11	10
Max. water vapour capacity (50Hz)	kg h⁻¹	0.62	0.66	0.73
	lb h⁻¹	1.4	1.5	1.6
Max. water vapour capacity (60Hz)	kg h⁻¹	0.74	0.8	0.87
	lb h⁻¹	1.6	1.8	1.9
Weight Approximate	Kg	80	90	100
Motor protection rating	IP	55	55	55
Motor rated power (50Hz)	kW	1.1	1.5	2.2
	Hp	1.5	2	3
Motor rated power (60Hz)	kW	1.3	1.8	2.6
	Hp	1.7	2.4	3.5
Noise level (50Hz)	dB(A)	58	60	60
Noise level (60Hz)	dB(A)	60	62	62
Oil refill capacity (Max.)	litre	4.3	4.8	5.5
	gal	1.1	1.3	1.5
Cooling type	cooling	Air	Air	Air
Recommended oil		Ultragrade Performance 70		

PERFORMANCE CURVES

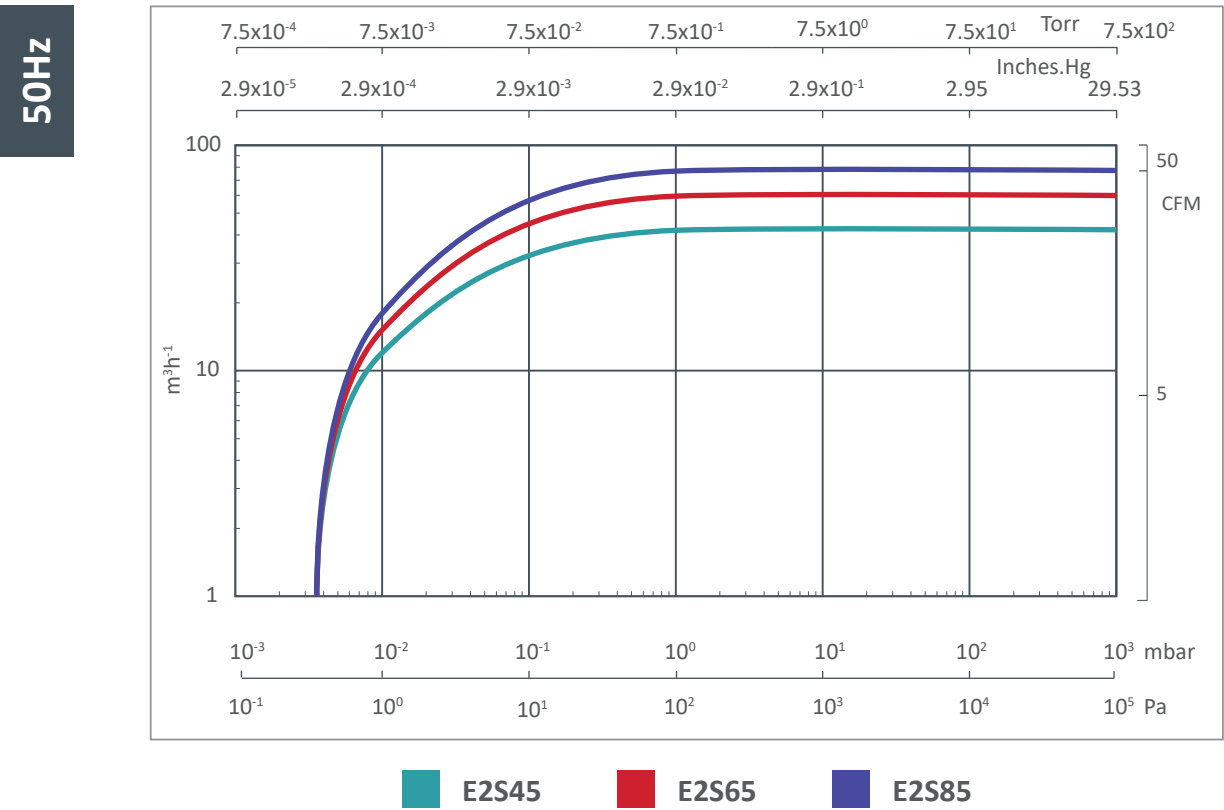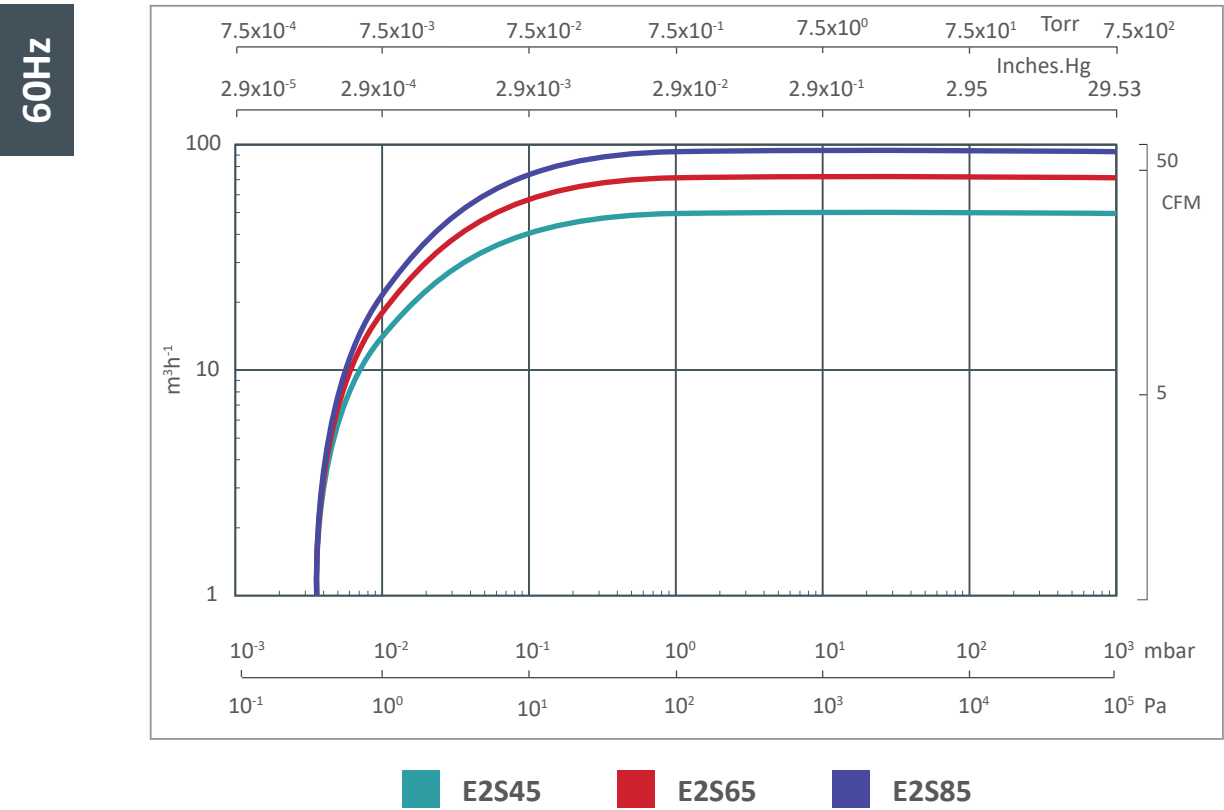


PERFORMANCE CURVES | E2S PUMP+EH BOOSTER COMBINATION


E2S-EH 60Hz

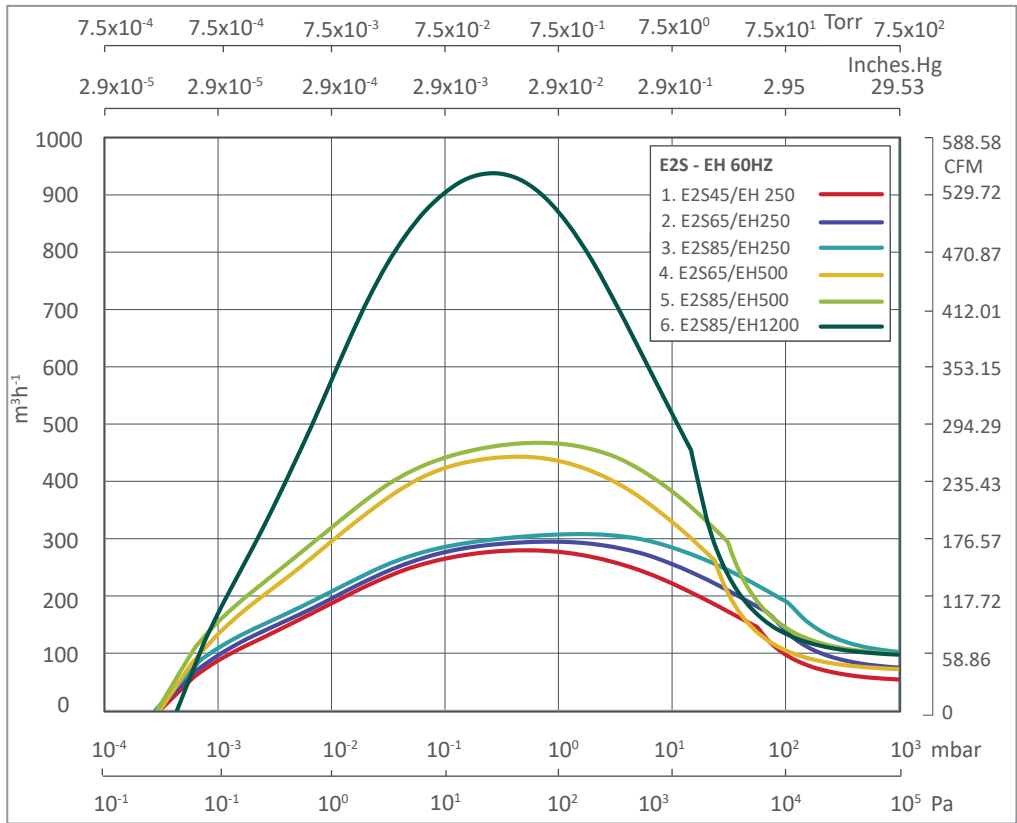

E2S-EH 50Hz

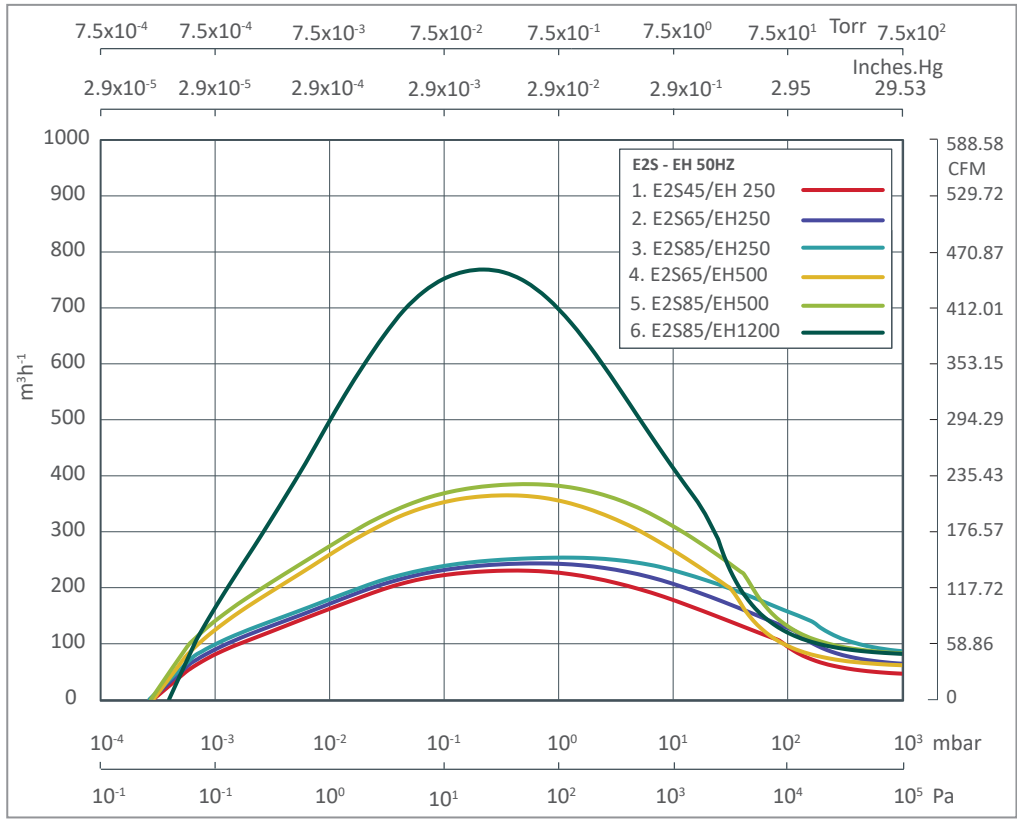

DIMENSIONS

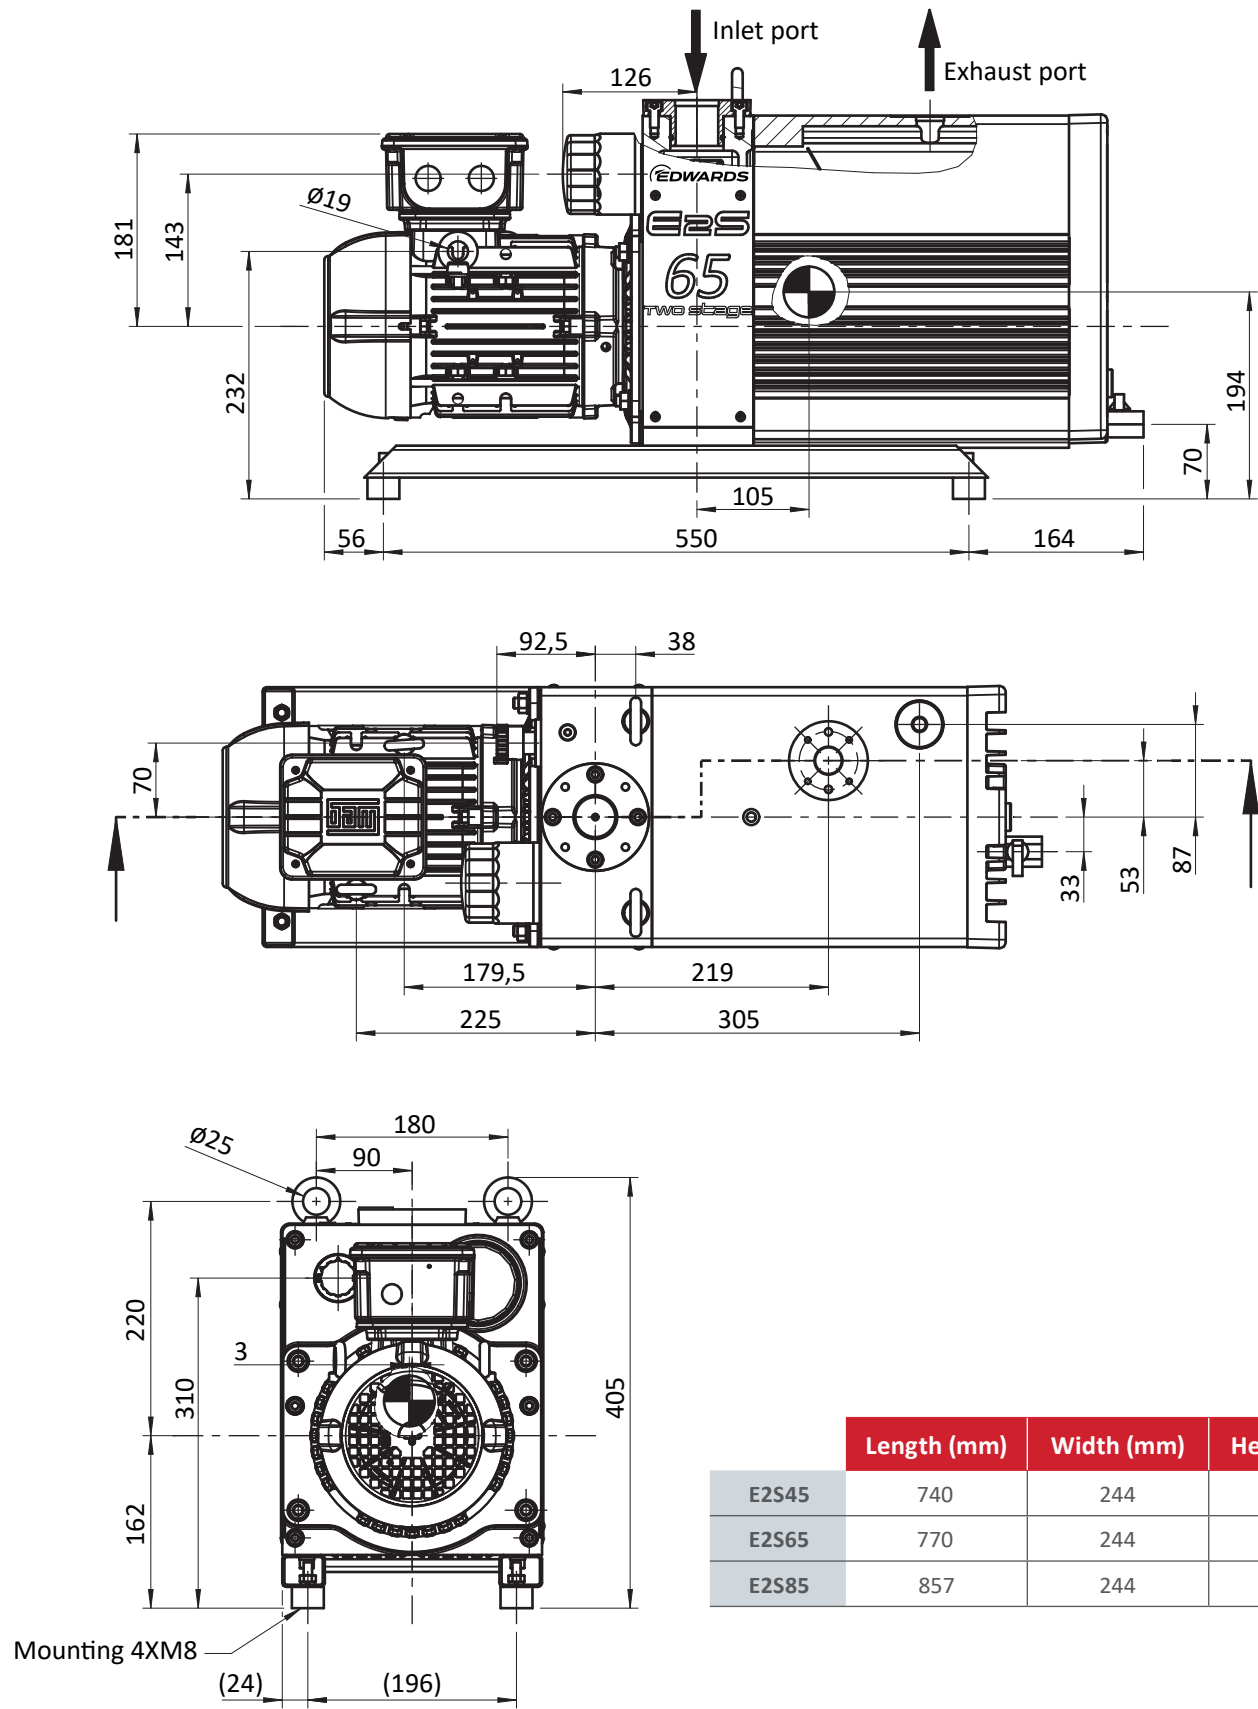

	Length (mm)	Width (mm)	Height (mm)
E2S45	740	244	405
E2S65	770	244	405
E2S85	857	244	405

SERVICE AND SUPPORT

To ensure your pump maintains optimal performance and reliability, we offer a wide range of service solutions, tailored to meet your needs. From Field Service intervention to Managed Maintenance agreements, we will take care of your pump to ensure that it continues to deliver clean, consistent, efficient performance, with lower running cost and optimum total cost of ownership for its entire operating life.

Selecting original spare parts, maintenance kits and grease, means that every critical part performs as it was intended. Form, fit and function are guaranteed. Our services engineers only fit 100% genuine parts to ensure you receive the best result from each and every service.




ORDERING INFORMATION

Mat. Number	Description	Mat. Number	Description	Cooling
E2S		E2S-EH packages with 400V/50Hz EH booster		
A35324950	E2S45 EU/US 50/60Hz	A35320250	E2S45/EH250 EU/CN 50Hz system	Air/Air
A35324934	E2S45 ASIA 50/60Hz	A35420250	E2S65/EH250 EU/CN 50Hz system	Air/Air
A35424950	E2S65 EU/US 50/60Hz	A35520250	E2S85/EH250 EU/CN 50Hz system	Air/Air
A35424934	E2S65 ASIA 50/60Hz	A35420500	E2S65/EH500 EU/CN 50Hz system	Air/Air
A35524950	E2S85 EU/US 50/60Hz	A35520500	E2S85/EH500 EU/CN 50Hz system	Air/Air
A35524934	E2S85 ASIA 50/60Hz	NRV355210	E2S85/EH1200 EU/CN 50Hz system	Air/Water

Mobility kit available separately.

E2S ACCESSORIES

Instrumentation	Gas ballast
A35924247 Oil level monitor E2S	A35924546 Electric gas ballast E2S with solenoid valve
A35924246 Temperature switch E2S	A35924546 Permanent gas ballast E2S without solenoid valve
Exhaust elements	Booster fitting kits (spool + supporting bracket)
1019040A20 E2S45 exhaust oil mist filter	A35924131 EH250 fitting kit for E2S 45-65-85
1019090A20 E2S 65-85 exhaust oil mist filter	A35924142 EH500 fitting kit E2S 65-85
Inlet elements	A35924153 EH1200 adapter spool E2S85
A44202000 Inlet dust filter ITF100	NRV355212 EH1200 frame for E2S85
A44302000 High capacity inlet dust filter ITM100	Mobility kits
A44102000 Inlet catchpot ITO100	NRV355222 Mobility kit for E2S 45-65-85 with EH250-500
A44402000 Inlet chemical trap ITC100	NRV355232 Mobility kit for E2S85 with EH1200 (castors)

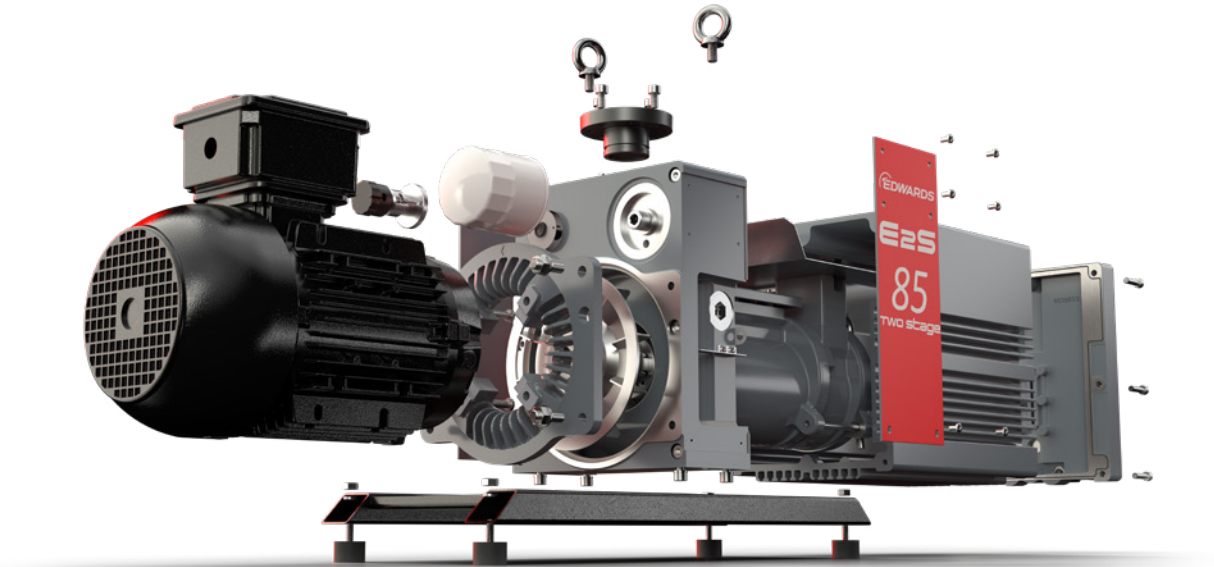



GLOBAL CONTACTS

Publication Number: 3602 015 2 01
© Edwards Limited 2022. All rights reserved.
Edwards and the Edwards logo are trademarks of Edwards Limited.

Whilst we make every effort to ensure that we accurately describe our products and services, we give no guarantee as to the accuracy or completeness of any information provided in this brochure.

Edwards Ltd., registered in England and Wales
No. 6124750, registered office: Innovation Drive,
Burgess Hill, West Sussex, RH15 9TW, UK.

Part of the Atlas Copco Group

EMEA

UK	0345 9 212 223 +44 1444 253 000
Belgium	+44 1293 60 3350
France	+33 1 4121 1256
Germany	0800 000 1456
Italy	+ 39 02 48 4471
Israel	+ 972 8 681 0633
Russia	+7 495 933 55 50 Ext. 1800/1803 +8 800 775 80 99
Spain	+34 91 653 21 85
Portugal	+351 21 000 8212

ASIA PACIFIC

China	+86 400 111 9618
India	+91 20 4075 2222
Japan	+81 47 458 8836
Korea	+82 31 716 7070
Singapore	+65 6546 8408
Taiwan	+886 3758 1000

AMERICAS

USA	+1 800 848 9800
Brazil	+55 11 3952 5000